

# MIDI Troubleshooting

If your MIDI record or play is not operating check the following:

- ✓ Your computer must have at least 1.25 Free Ram. The RAM must be free and not used as Ram Disk. This information is found on your Apple II GS Control Panel. (*See Apple II GS Owner's Guide*)
- ✓ Slot 7 of the computer must be set to Your Card. This information is also found on the Apple II GS control Panel.
- ✓ If you are using a MIDI interface card that plugs into a slot inside the computer, use slot 2, and set Slot 2 on the Apple II GS Control Panel to Your Card.
- ✓ Check the **External Box** option in the **MIDI Options** window. This box will appear once **MIDI Options** is selected from the **MIDI Menu**. (*More information regarding MIDI Options is found on Page 36 of the program manual*)
- ✓ If you are using a Casio HT700 synthesizer and the Apple MIDI Box, you must always select one of the synthesizer's instrument buttons (piano, harpsichord, etc. . . ) before each Real or Step time recording.
- ✓ Your Apple II GS must have the **2.0 ROM Revision B**. If the first 3 digits of your serial number are less than 704 then you will probably need the 2.0 ROM Revision B update. Your local Apple dealer can install this update for you at little or no charge.

*Please Note: Any changes made to the Apple II GS Control Panel will not be saved until the computer is rebooted. Once rebooted, the computer will then look at the control panel to see if any changes have been made.*